


ASSEMBLY & INSTALLATION INSTRUCTIONS

A767

Mobius Low Voltage Pendant 161181

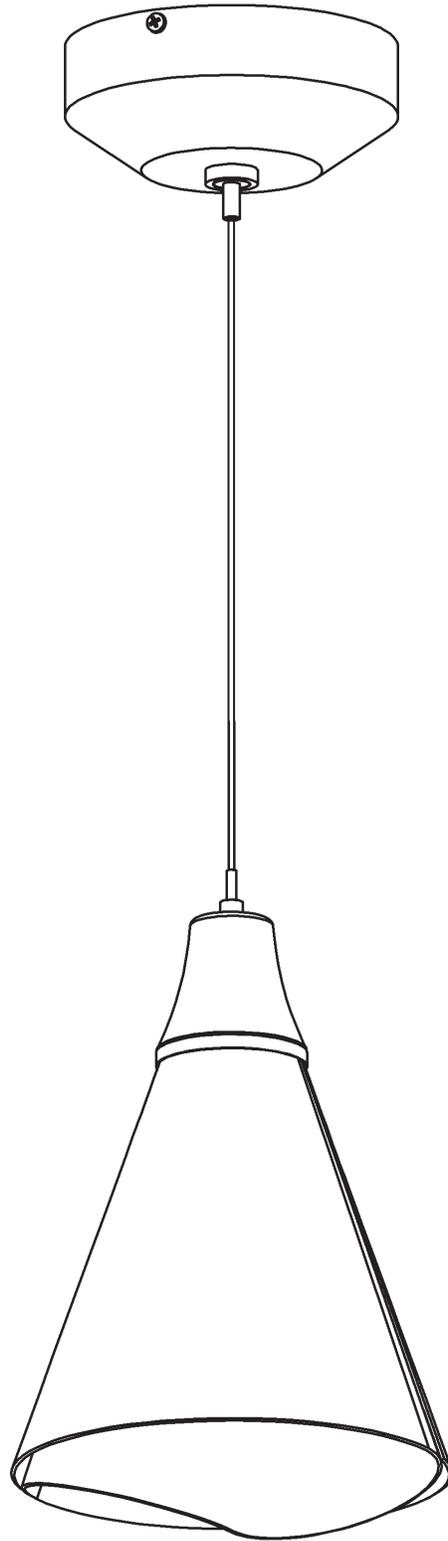

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

Component Parts

- A Crossbar**
- B Cupped Washer**
- C Ground Screw**
- D Canopy**
- E #8 Screws (2)**
- F Canopy Gripper**
- G Supply/Support Cable**
- H Fixture**
- I Screws with Lock Washer (2)**
- J Canopy Plate**
- K Bulb (not included)**
- L Socket**
- M Shade**
- N Glass**
- O Flat Shade Panel**
- P Male End Plastic Button (4)**
- Q Female End Plastic Button (4)**



Mobius Low Voltage Pendant 161181

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

To Attach to Ceiling (Figures 1 & 2)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack fixture from the carton.
2. Crossbar (A) and canopy (D) ship assembled. Remove (2) #8 screws (E) to separate the canopy from the crossbar. Retain parts for later use.
3. Using two machine screws (not provided), fasten the crossbar (A) to the electric box.


Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

4. Height of fixture can be set before attaching the fixture to the ceiling. Remove screws with lock washers (I) and canopy plate (J) from canopy (D). If height is going to stay at max length or just a slight height adjustment is needed it may not be necessary to remove the canopy plate.

Note: Fixture is shipped at max height

5. Push supply/support cable (G) into canopy gripper (F) until desired height is reached. If cable needs to be pulled from canopy, push in on canopy gripper (F) plunger while pulling on supply/support cable (G) to adjust length.
6. Coil supply/support cable (G) in canopy (D) and place canopy plate (J) in canopy. Install screws w/lock washers (I) to secure plate.

Caution: Be sure not to pinch wires between canopy and plate

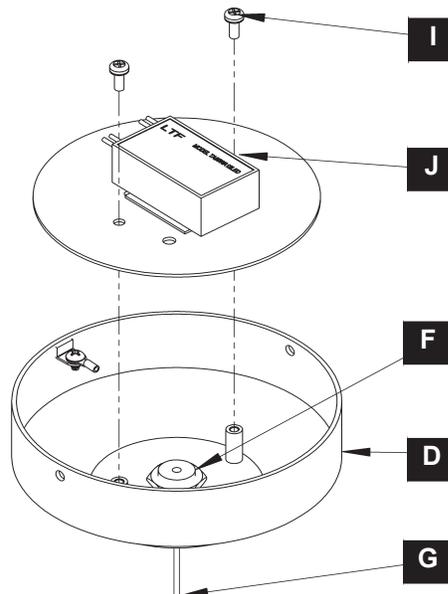

(Figure 1)

ASSEMBLY & INSTALLATION INSTRUCTIONS

A767

Mobius Low Voltage Pendant 161181


- Attach a pigtail lead to crossbar using ground screw (C) and the cupped washer (B). Raise canopy (D) close to ceiling. Using suitable wire connectors (not provided) connect fixture wires to supply wires (white to white, black to black). Connect all ground wires (bare copper or green to bare copper or green). *Figure 2*

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY AND NO BARE WIRE IS EXPOSED.

- Align holes in canopy (D) with holes in crossbar (A) and secure with (2) #8 screws (E).

CAUTION: BE SURE NO WIRES ARE PINCHED BETWEEN THE CANOPY (D) AND THE CEILING.

- If fixture height needs to be adjusted to achieve desired height, push up on canopy gripper (F) and gently pull down/push up on supply/support cable (G).
- Follow instructions on following page to assemble and install shade.

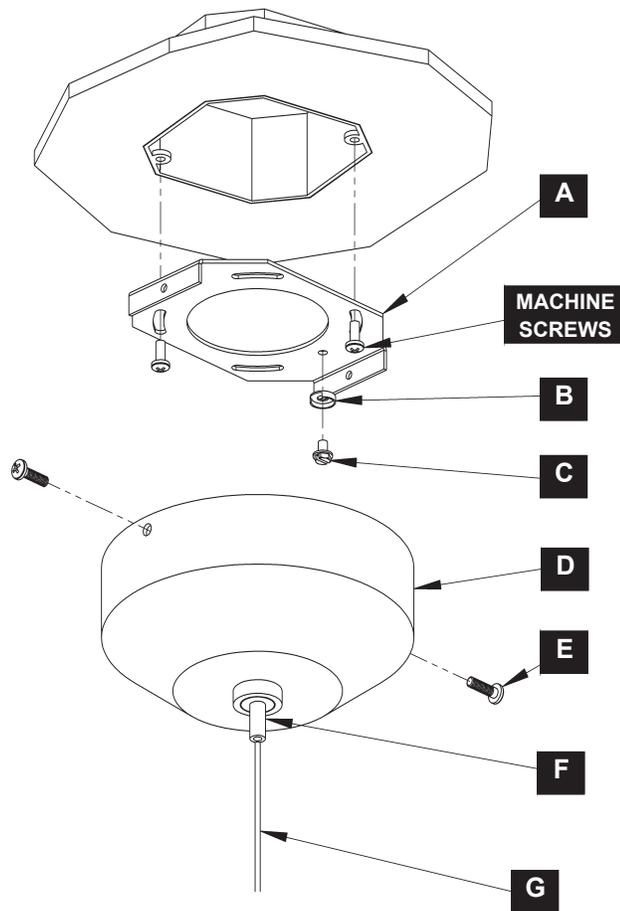


(Figure 2)

Mobius Low Voltage Pendant 161181

To Assemble Shade


YouTube To see a video on how to assemble the Mobius shade, go to:
<http://www.youtube.com/user/HubbardtonForge?v=ifoOT34FMQ8>

Step 1 Identify all parts needed.

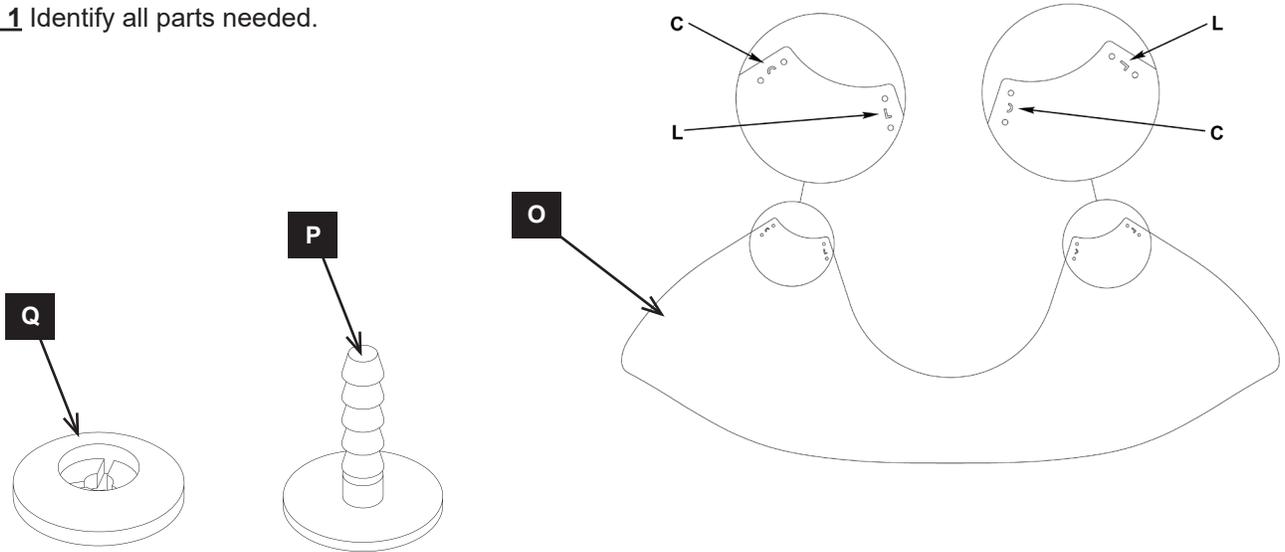


Step 2 Fold shade panel (O) over and align letter designations "L".


Note: Top letter "L" should be oriented the same as the bottom letter "L".

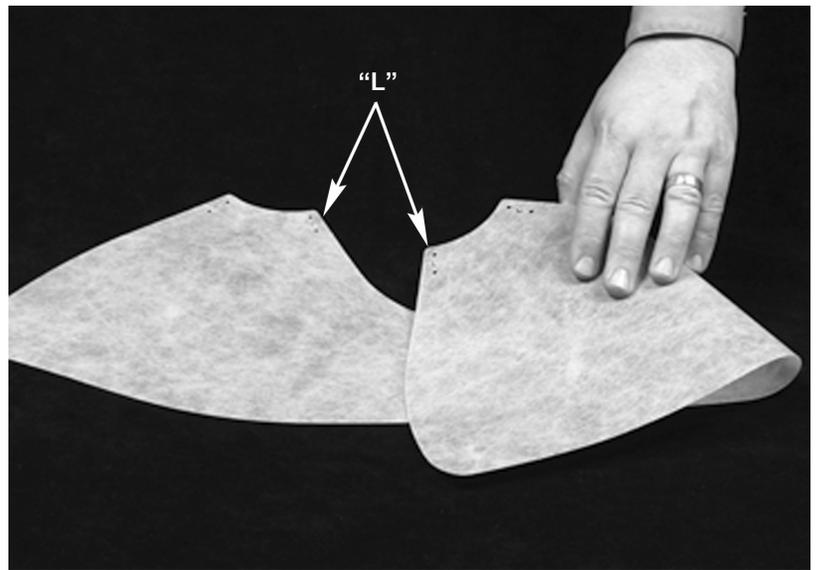

Step 3 Slip male end of plastic button up through bottom of shade panel as shown.

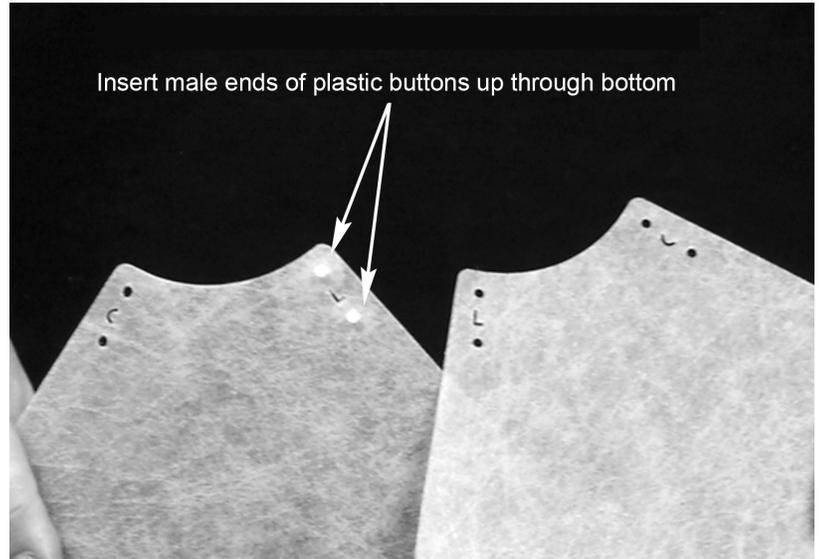


Step 4 Align "L" holes and mount the other side of the shade panel (O) onto the two male end plastic buttons (P). Install two female end plastic buttons (Q) and press firmly to snap into place. Clip excess length of the male button off after installing female plastic buttons.

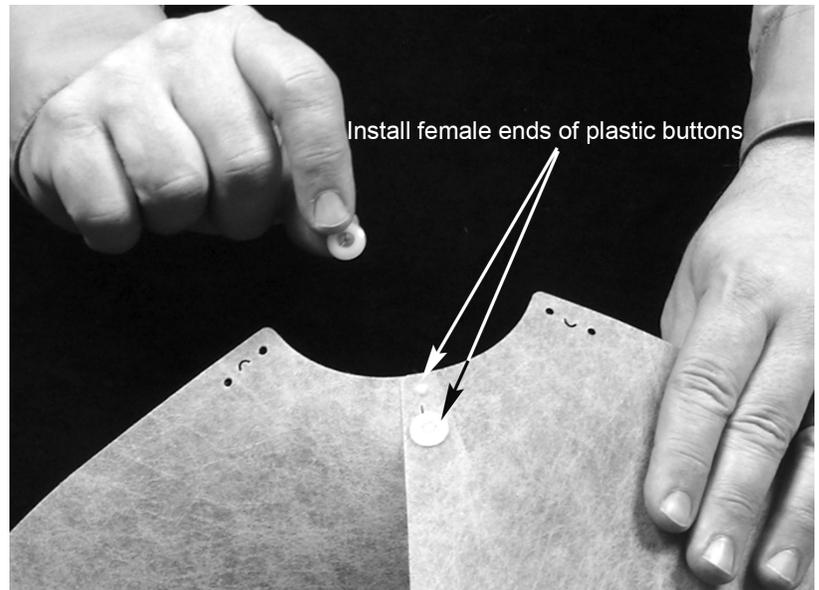


Step 5 Slip male end plastic buttons (P) through the “C” side of the shade panel (O).

Note: Letter “C” should read the same as shown (this indicates the outside of the shade).

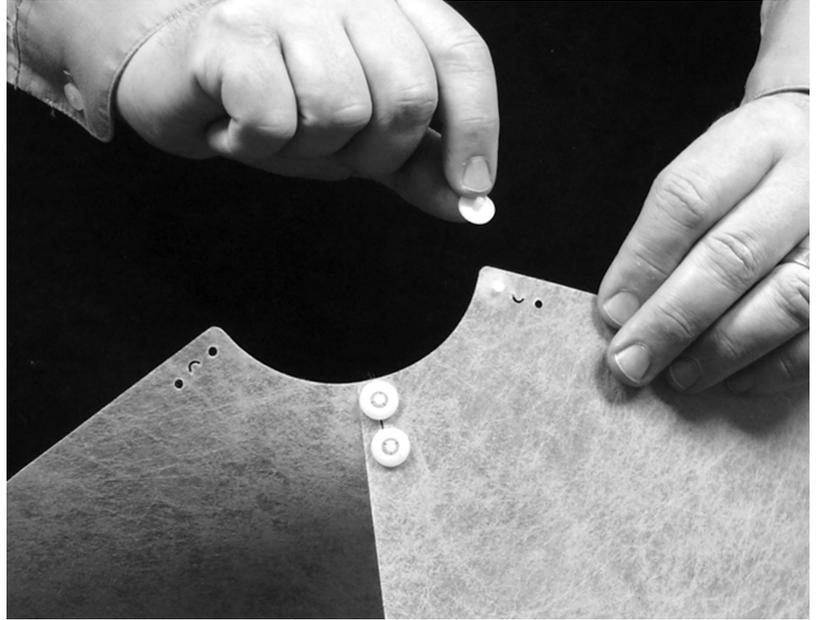


Step 6 Fold the shade panel (O) as shown to match the “C” sides. Insert the other side of the shade panel (O) onto the two male end plastic buttons (P).

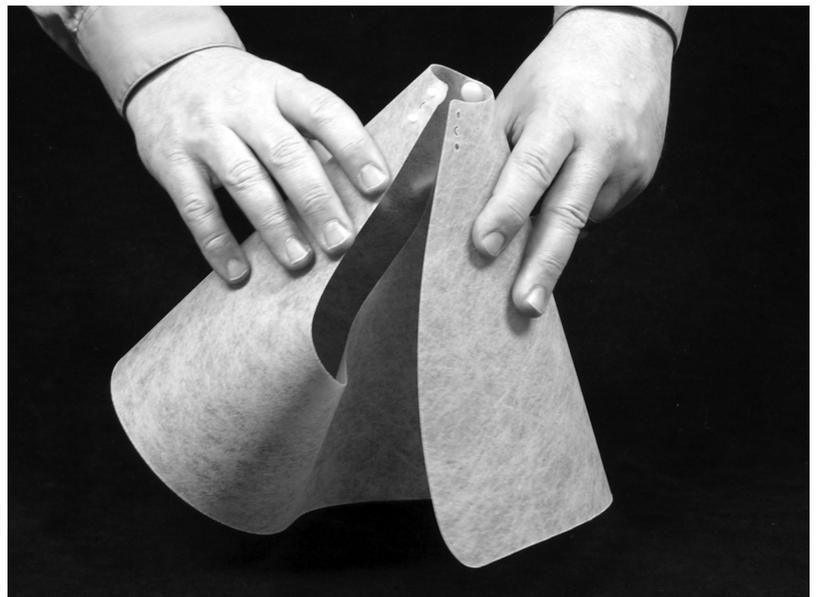

Step 7 Install two female end plastic buttons (Q) and press firmly to snap into place. Clip excess length of the male button off after installing female plastic buttons.



Bottom View of Assembled Shade

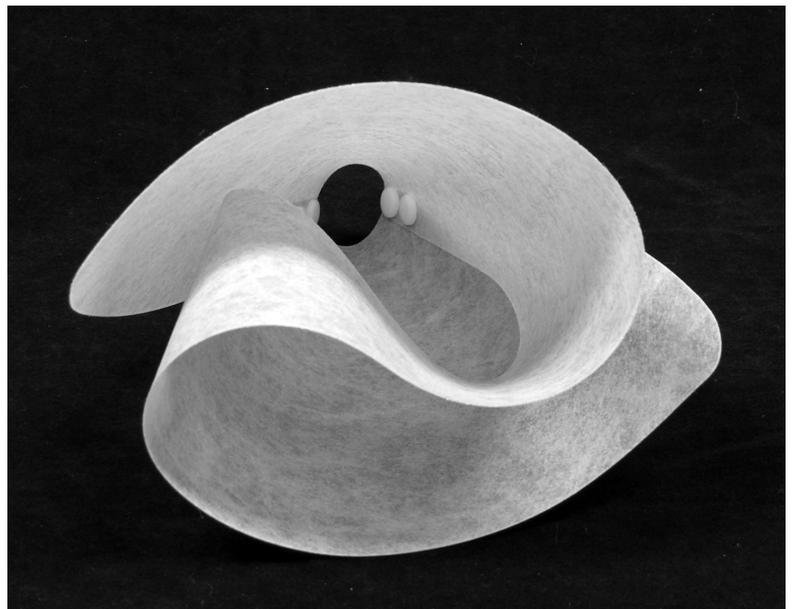


ASSEMBLY & INSTALLATION INSTRUCTIONS

A767

Mobius Low Voltage Pendant 161181

To Complete Installation (Figure 3)

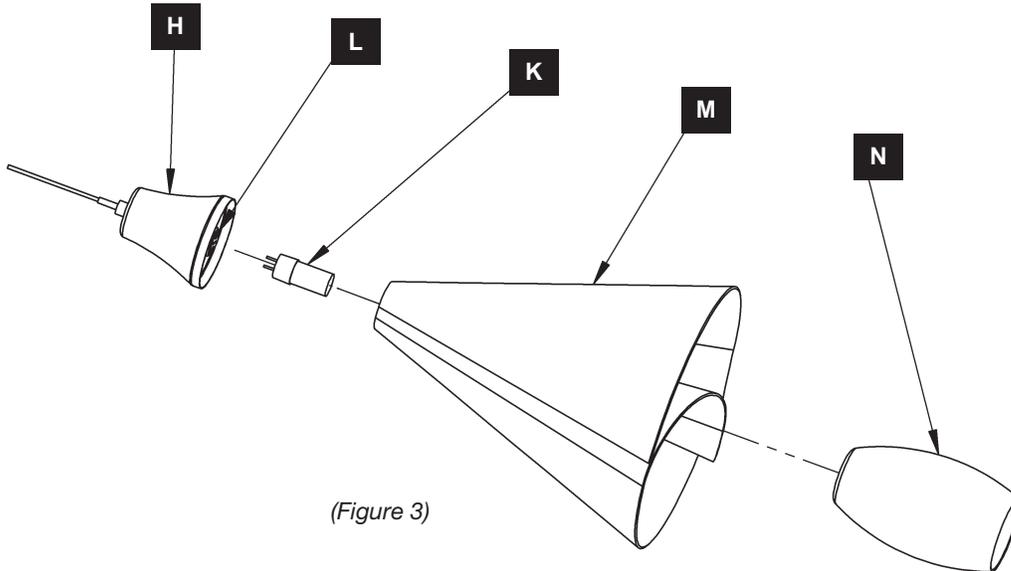

1. Install bulb (K) into socket (L).
2. Slip shade assembly (M) over bulb (K) and socket (L).
3. Thread glass (N) onto socket (L) to secure shade (M).

NOTE: BE CAREFUL NOT TO CROSS THREAD OR OVERTIGHTEN AND BREAK GLASS.

4. Restore electricity at the main breaker

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM